

KENWOOD TM-D710GA

(BOLD = hold for one sec; CAPS = tap quickly)

Set Power Level: LOW, repeat to desired level

Change Bands: F then BAND SELECT knob, repeat both keys to desired band

SCAN: **VFO** to scan frequencies, VFO to stop; **MR** to scan memory channels, MR to stop

Set CTCSS Tone: TONE, F, T SEL, dial tone frequency, press any key to set

Tone off: TONE repeatedly until off

Memory Store: F, rotate TUNING KNOB to select memory channel, M.IN to save

Name Memory Channel: F, Press TUNING KNOB, rotate Tuning Knob to select MEMORY, press TUNING KNOB, select MEMORY NAME, press TUNING KNOB

Rotate Tuning Knob to select character, press TUNING KNOB to set and go to next character. Repeat these two steps up to 8 characters. (If less than 8 characters, press Tuning KnobTWICE after last character,) then press ESC to set

Reverse Repeater Input and Output Frequencies: REV toggles

Turn Off Offset: F, SHIFT, repeat these two steps to toggle

+ - and off(blank),

Repeat to turn back on, or go off frequency to revert to automatic shift.

Weather Channel: PF1, VFO to exit

KENWOOD TM-D710GA

(BOLD = hold for one sec; CAPS = tap quickly)

Set Power Level: LOW, repeat to desired level

Change Bands: F then BAND SELECT knob, repeat both keys to desired band

SCAN: **VFO** to scan frequencies, VFO to stop; **MR** to scan memory channels, MR to stop

Set CTCSS Tone: TONE, F, T SEL, dial tone frequency, press any key to set

Tone off: TONE repeatedly until off

Memory Store: F, rotate TUNING KNOB to select memory channel, M.IN to save

Name Memory Channel: F, Press TUNING KNOB, rotate Tuning Knob to select MEMORY, press TUNING KNOB, select MEMORY NAME, press TUNING KNOB

Rotate Tuning Knob to select character, press TUNING KNOB to set and go to next character. Repeat these two steps up to 8 characters. (If less than 8 characters, press Tuning KnobTWICE after last character,) then press ESC to set

Reverse Repeater Input and Output Frequencies: REV toggles

Turn Off Offset: F, SHIFT, repeat these two steps to toggle

+ - and off(blank),

Repeat to turn back on, or go off frequency to revert to automatic shift.

Weather Channel: PF1, VFO to exit