

YAESU FT-1802M

(BOLD = hold for 1 sec; CAPS = tap quickly)

Set Power Level: A/N(LOW), repeat to desired level

Scan: **Mic UP** or **Mic DOWN**

Mic UP or Mic DOWN or PTT to stop

Set CTCSS Tone: **MHz(SET)**

DIAL "SQL.TYP" (49), then MHz.(SET)

DIAL "TONE", then MHz(SET)

DIAL "TN FRQ", then MHz(SET)

DIAL to desired tone frequency

MHz(SET)

Tone Off: **MHz(SET)**

DIAL "OFF" (one click back from Tone)

MHz(SET), **MHz(SET)**

Reverse Repeater input and output: REV(DW) or Mic B

Disable Repeater Offset: **IN VFO MHz(SET)**,

DIAL "RPT" (43), then MHz(SET)

DIAL "SIMP", then **MHz(SET)**

Rotating dial one click will revert to normal offset.

Memory Recall: MW(D/MR) toggle between memory and VFO

Memory Store: Select frequency (and CCTSS Tone)

MW (D/MR) then DIAL location if not next available

MW (D/MR)

Memory Label: Recall memory channel

MHz (SET), then Dial NM SET(30)

MHz (SET), DIAL first character

A/N (LOW) to next character

Repeat last two steps to complete name.

(DW(REV) to back up)

MHz (SET), **MHz (SET)**

See Memory Channel Frequency: **A/N (LOW)**

Weather Channel: Mic P4