

YAESU FT-1900R/E

(BOLD) = hold for 1 sec; CAPS = tap quickly)

Set Power Level: LOW/AN repeatedly to desired level

Scan: mic UP or mic DOWN. PTT to stop scan

Lock Keypad: %, repeat to unlock

Set CTCSS : **MHz(SET)**, then DIAL to "SQL.TYP" (49)

MHz(SET), then DIAL I to "TONE"

MHz SET, DIAL to "TN FRQ" (52)

MHz(SET), then DIAL to desired frequency

MHz(SET)

Tone Off, **MHz(SET)**, then DIAL to "SQL.TYP" (49)

MHz(SET), then DIAL to "OFF"

MHz(SET)

Memory Store: **D/MR(MW)**

DIAL storage # if you don't want the next empty space

D/MR(MW) again to save and exit

Memory Recall: D/MR(MW), repeat if necessary until "MR" icon

And a memory frequency appears

DIAL memory storage location

D/MR(MW) to get back to VFO

Label Memory Chanel: Recall memory channel

MHz(SET), then DIAL to "NM SET" (30)

MHz(SET),

DIAL to first character, LOW/AN to next space

Repeat for up to 6 characters

MHz(SET)

To see Memory Frequency

LOW(AN), Repeat to toggle back

Reverse Repeater Input and Output: REV /DW

Repeater Offset on/off

MHz(SET), then DIAL "RPT" (43)

MHz(SET), then DIAL to "SIMP"

MHz(SET)

Dialing one click off frequency will revert to normal offset.

Weather Channel: Mic P4 toggles between Weather and VFO

DIAL to change weather channel