

## **YAESU FT-2900R**

**(Bold)** = hold for 1 sec; CAPS = tap quickly)

**Set Power Level:** LOW(A/N) repeatedly to desired level

**Scan:** MIC UP or MIC DOWN, rotate dial to reverse direction  
MIC up or MIC DOWN or PTT to stop

**Set CTCSS Tone: MHz(SET)**

DIAL "SQL TYP" (49), then MHz(SET)

DIAL "TONE", MHz(SET)

DIAL 3 clicks clockwise to "TN FRQ" (52)

MHz(SET), then DIAL desired frequency

**MHz(SET)**

**Tone Off: MHz(SET)**

Dial "OFF" (one click back from Tone)

MHz(SET), **MHz(SET)**

**Reverse Repeater input and output: REV(DW)**

**Disable Repeater Offset: IN VFO MHz(SET)**

DIAL "RPT" (43), then MHz(SET)

DIAL "SIMP" **MHz(SET)**

Rotating frequency dial one click will revert to normal offset

**Memory Store:** Select frequency (and CCTSS Tone)

**D/MR(MW)**

DIAL location if not next available

D/MR(MW)

**Memory Recall:** D/MR(MW) toggles between memory and VFO

**Memory Label:** Recall memory channel

**MHz(SET)**, then DIAL "NM SET" (30)

MHz(SET), then DIAL first character

A/N(LOW) to next character

(DW/REV) to back up)

MHz(SET), **MHz (SET)**

**See Memory Channel Frequency: LOW(A/N) toggle**

**Weather Channel:** Mic P4