

YAESU FT-8800R/E

(**BOLD** = hold for one sec; CAPS = tap quickly. The middle button is “SET”, the upper left or right knob/button is “DIAL”)

Menu config: SET, turn DIAL to menu #, DIAL, turn DIAL to choose setting, DIAL to enter, SET to exit

Change Xmit Radio: DIAL (left or right)

Set Power Level: LOW cycles through levels

Change Bands: DIAL (left or right)(when in VFO mode)

Scan: SCN to scan, SCN again to stop, turn DIAL to change up/down

Set CTCSS Tone: Mic P3 cycle to ENC; config menu #40 to desired tone frequency

Disable tone: Mic P3 cycle to “OFF”

Memory Store: SET, turn UPPER KNOB to select location, SET to save

Name Memory Channel: SET, turn DIAL to location, SET, turn DIAL to select letter, DIAL to enter, SET when done.

Reverse Repeater Input/Output Frequencies: Config menu #20 to KEY2, use right V/M as reverse.

Disable Repeater Offset: change menu #33 to “OFF” (temporary)

Get Frequency for Current Memory: LOW when in memory mode, LOW to undo

Weather Channel: mic keypad 162.550 (Multnomah/Washington/Clackamas counties)