

## YAESU VX-8 R HANDHELD

**Set Power Level:** Press FW then the TX PO button-

**Change Bands:** BAND, repeat to desired band

**Scan:** SCAN (up or down arrow); PTT to stop scan

**Lock/Unlock Keypad:** Tap Power button

**Set CTCSS :**

Press FW key then MODE key

DIAL to tone mode press MODE to save

Press FW key then CODE key

DIAL to frequency of CTCSS tone

Press CODE to save and exit to normal operations

**Tone off:** Press FW key then MODE key

DIAL to off

Press MODE key to save and exit to normal operations

**Reverse Repeater Input and Output:** HM/REV, repeat to undo

**Disable Repeater Offset:** Press FW then RPT

DIAL Simplex press RPT to save

**Memory Store:** In VFO, select frequency (and Tone),

Press FW key for ½ second (you have 5 seconds to choose a memory #)

Dial storage # if you don't want the next empty space

Press FW key to store to memory and again to exit

**Memory Recall:** V/M toggles between Memory and VFO

Dial memory storage location

**Label Memory Channel:** Recall memory channel

Press MENU for 1 second

Dial to 53:MEMORY NAME

Press MENU

(to clear previous name, **HM/RV** for 2 seconds)

Rotate DIAL or use keyboard keys to select characters

Press MODE to move to next character

Press BAND to backspace

Press PTT to save and exit

**Weather Channel:** Press A key

Press FW then SP BNK(9) note: Special memory

Press BAND to select WX CH

Rotate DIAL to select (162.550 loudest at home)

Press V/M to exit