

## ALINCO DJ-V57T HANDHELD

**(Func** key then press next key within 5-seconds)  
(A key being listed implies it being pressed)  
(Escape most operations, press *PTT* or *#1* key)

**Set Audio Level:** (pg23) \*-*VOL* key, adjust *DIAL* to Desired level.

**Set Power Level:** (pg 32) *Func* key then *5-PO* key.  
Repeat to cycle thru LO, MI, or blank (HI).

**Squelch Level:** #-*SQL* key, rotate dial for level.

**Change Bands:** (pg24) *D-Band-Name* key.

**Key Lock:** *Func* key then *B-Scan-KL* key.  
Repeat to unlock.

**Memory Recall:** *A-V/M-MW* key toggles between Mem & VFO. *Dial* to desired channel.

**Set CTCSS:** (pg36) *Func* key then *4-TSQ* key.  
Cycle thru T, TSQ Settings, and Off.  
DCS (pg37) must be off to use T or TSQ.

**Set CTCSS Tone:** Rotate *Dial* while T or TSQ Setting is displayed (See above).

**Tone Off:** See **Set CTCSS** (See above).

**Reverse Repeater I/O:** (pg 42) *0-RPT* key.  
Repeat to return.

**Repeater Offset:** (pg 27) *Func* key then *2-Shift* key.  
Press *2-Shift* key repeatedly to cycle thru -, +, Split, and OST-Off.

**Disable Repeater Offset:** Set to OST-Off (above).

**\*\*Disable/Enable Repeater-Access Function\*\*:**  
*Func* key, then *0-RPT* key.  
(\*Disable, **Overrides all** VFO/Memory settings\*)

**Memory Store:** (pg 28) Set settings in VFO Mode.  
*A-V/M-MW* key, M appears. *Func* key, rotate *Dial* To Mem Channel.  
*A-V/M-MW* key. Done.  
(Flashing M = empty channel)

**Erase Memory Channel:** *A-V/M-MW* key to Memory Mode. Rotate *Dial* to select Channel. *Func* key, then *A-V/M-MW* key two times.

**Scan VFO:** (pg 33) *A* key to VFO, *B* key.

Scans entire band starting w/ display freq.

**Scan Mem:** *A* key to Mem Mode, *B* key.

Rotate *Dial* to change scan direction.

(Won't scan from Call Mem Channel)

**Label Mem Channel:** (pg 35) Select Mem chan #.  
*Func* key then *D-Band-Name* key.

Rotate *Dial* to display desired Character.

Press *D-Band-Name* key to select.

Repeat as necessary.

*C-Call-Skip* key to delete all characters.

Press *#1* key to exit.

**View Frequency with Label present:**

*Func* key. Displays Frequency for 5-sec.

(*1-Step* to return Label Display early)

**Enter new Repeater Parameters:**

Change to desired Band.

Enter Frequency from Key Pad.

Set Repeater Offset.

Set CTCSS Function.

Set CTCSS Tone (If needed).

Store in memory (if desired).

Label Memory Channel (if desired).