

ICOM IC-W32A

(**BOLD** = hold for 2 sec; CAPS = tap quickly)

Set Power Level: A (H/L **SET**) toggles between low and high power

Change Bands: BAND toggles between 144MHz, 440 MHz and deactivate.

Lock Keypad and Frequency Dial: **CALL(LOCK)** toggles between lock and unlock

Scan: **MAIN(SCAN)** Rotate Dial to reverse direction of scan. VFO to stop scan.

Check Battery Level: Battery level displays for two seconds when radio is turned on.

Set CTCSS Tone: **A (H/L SET)** then B(TONEDUP) repeatedly until "RT"
Dial desired tone frequency, VFO(CLRMHz) twice

Reverse Repeater Input and Output: ???

Turn Off Repeater Offset (simplex on repeater frequency): In VFO mode,
B(TONEDUP) repeat until DUP and -DUP disappear. Dial off frequency to undo this.

Memory Recall: MR then dial desired memory channel. VFO to exit memory mode

Memory Store: Set frequency (and tone and any other parameters) in VFO mode. S.MW(MW), rotate dial to desired memory channel # if you don't want the one displayed, **S.MW(MW)**

Delete a Memory Channel: Go to memory channel to be deleted,
MW(MW) then **S.MW(MW)** then VFO(CLRMHz)

Name Memory Channel: Select memory channel to be named. D(M-N) to "NO NAME" if necessary. Then **D(M-N)**, Dial first character (or use key pad numbers like a telephone). Use #**T-SCAN**< and D(M-N)> to move from space to space. Use the 0(Symbol) key to erase or as a space. VFO to finish.

See Frequency of Named Channel: D(M-NMN-W) toggles between Memory Channel # and Name, and Frequency and Memory Channel #

Weather Channel: On right side display, BAND repeatedly until WX, dial to preferred weather channel.