

## YAESU FT-60R/E HANDHELD

**BOLD** = hold for 1 sec; CAPS = tap quickly)

**Set Power Level:** F/W then 3(TX PO)  
DIAL desired level, then PTT

**Change Bands:** BAND, repeat to desired band

**Scan:** **▲MHz** or **▼MHz**  
DIAL one click up or down to reverse direction of scan  
PTT to stop scan

**Lock Keypad:** **6(LOCK)**, repeat to unlock

**Set CTCSS:** F/W then 1(Sq typ)  
DIAL to "TONE"  
PTT  
F/W then 2(CODE)  
DIAL tone frequency  
FW to save and exit

**Turn Off CTCSS Tone:** FW then 1(SQ TYP)  
DIAL to "OFF"  
PTT

**Reverse Repeater Input and Output:** HM/REV, repeat to return to normal

**Turn Off Repeater Offset:** FW then 0(%)SET  
DIAL 38 RPT.MOD.  
FW then DIAL " RPT.OFF"  
PTT

Note: this is temporary! Once you leave this frequency, the repeater shift will come back on.

**Store Memory:** Select desired frequency (and CTCSS Tone)  
**F/W,** (DIAL desired memory channel if you don't want next available one)  
F/W

**Memory Recall:** V/M toggles between Memory and VFO  
DIAL memory storage location

**Label Memory Chanel:** Recall memory channel  
F/W the 0(7)SET  
DIAL TO 28 "NM WRT"  
F/W (If over-writing previous name, FW again)  
DIAL first character  
F/W to next space (▼MHz backs up a space)  
Repeat last two steps up to 6 characters  
If less than 6 characters, **F/W**  
PTT to save and exit

**Display Memory Label:** In "Alpha" mode, recall memory channel.  
BAND toggles between label and frequency

**Set "Alpha" Mode:** MR to Memory recall  
F/W then 0(7)SET  
DIAL to 27 "NAME"  
F/W then DIAL to "Alpha"  
PTT

**Delete a Memory Channel:** V/M(PRI) to enter memory mode  
**F/W** then DIAL memory Channel to be deleted  
HM/RV

**Weather Channel:** **1(SQ TYP)** toggles between weather and VFO  
DIAL desired weather channel