

YAESU VX-7 R HANDHELD

(**BOLD** = hold for 1 sec; CAPS = tap quickly)

Set Power Level: MON/F then % repeatedly to desired level

Change Bands: BAND, repeat to desired band

Scan: MON/F then 1-SCAN; PTT to stop scan

Lock Keypad: %, repeat to unlock

Set CTCSS : MON/F, then -8-TONE

MAIN (or SUB) , repeat to "TONE"

DIAL one click clockwise to "TONE SET"

BAND, then MAIN (or SUB) to code frequency desired

BAND, then PTT

Tone off: MON/F, then -8-TONE

MAIN (or SUB) , repeat to "OFF"

PTTSelect

Reverse Repeater Input and Output: HM/REV, repeat to undo

Disable Repeater Offset: IN VFO MON/F, then 0(SET)

DIAL "Basic Setup RPT SHIFT"

Main (or SUB), repeat to "SIMP"

PTT

Rotation the dial one click will revert to normal offset.

Memory Store: In VFO, select frequency (and Tone),

MON/F,

Dial storage # if you don't want the next empty space

MON/F again to save and exit

Memory Recall: V/M toggles between Memory and VFO

Dial memory storage location

Label Memory Channel: Recall memory channel

MON/F then 0/SET

Dial to "Basic setup:11 NAME SET"

BAND

MAIN (or SUB) to first character

DIAL 1 click to next space

Repeat last two lines for up to 8 characters

PTT to save

Weather Channel: MON/F then 3-WX

Dial to change weather channel

MON/F the 3-WX to exit to **exit**